

Description

The G10020N standard duty grease gun is capable of generating a maximum working pressure of up to 8,000psi. Its precision-machined head with air release valve/filler point offers superior quality. Every component including the barrel is tested to meet our quality control standards. The G10020N comes complete with a 150mm rigid tube and 4 jaw coupler and has a 500g capacity when using bulk fill. The G10020N can deliver up to 0.95g of grease per stroke & is suitable for most greases up to NLGI2.


Specifications

Uses:	450g cartridge, suction bulk fill or loader pump
Capacity:	450g cartridge or 500g bulk grease capacity
Pressure Capabilities:	Maximum: Up to 8,000psi
Delivery:	0.95g per stroke
Weight:	1.5kg


Operating Instructions

How to load a cartridge in your grease gun:

1. Unscrew the head from the barrel
2. Pull back the rod handle and lock into position
 - a. *Push-Lock Style*
Pull the rod handle through the housing and pull into the slotted end cap
 - b. *Stopper Style*
Pull back the rod handle to automatically lock the rod by stopper in the position

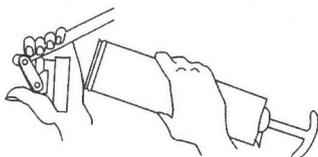


Step 1

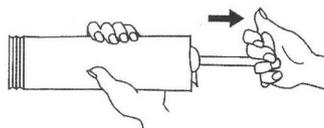


Step 2

3. Remove the plastic cap from the end of grease cartridge, and insert the open end first into the barrel
Loading ways:

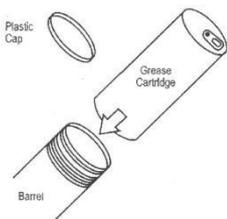

Step 3
A. Cartridge Loading

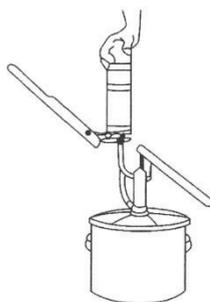


Step 3
B. Dispenser Loading



Step 3
C. Bulk Loading



- Screw head back onto the barrel

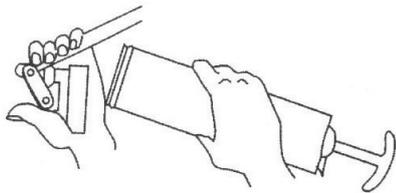

Step 4


- Unlock the rod handle from the end cap
(If the rod handle is hard to release back from the end cap, slightly loosen the gun head 1-3 turns)

- Push-Lock Style*


Release the rod handle from the slotted end cap, and push down the rod handle into the barrel

- Stopper style*

Press the stopper to release rod handle from end cap and at the same time push down the rod handle into the barrel

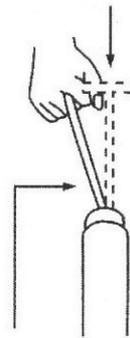


Step 5a

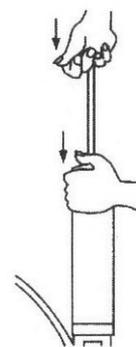


Step 5b

- Unscrew gun head 1-3 turns and pump the lever handle around 6-8 times until grease comes out. This releases air pockets from barrel and makes it easy to pump the grease
- Screw the gun head tightly and ready for priming

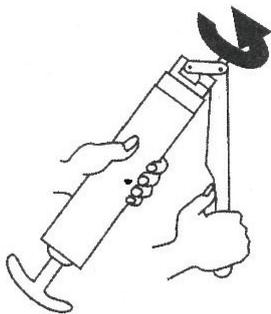

Step 6

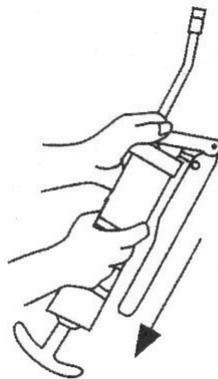

Step 7

Trouble Shooting

Problem: Gun not pumping grease

Possible causes: Air pocket between in the tube and gun head, or between in the gun head and spout

Solution:

- Take off spout from gun head
- Unscrew container tube 1-3 turns from gun head
- Pump the lever handle around 6-8 times until grease comes out
- Screw the gun head tightly and ready for priming

NSW

TEL: (02) 9939 0711

FAX: (02) 9939 0411

QLD/PNG

TEL: (07) 3204 9166

FAX: (07) 3204 1224

VIC/TAS

TEL: (03) 8787 8288

FAX: (03) 8787 8266

WA

TEL: (08) 9209 3066

FAX: (08) 9209 3933

SA/NT

TEL: (08) 8241 7111


FAX: (08) 8241 7011

NZ

TEL: (09) 447 1007

FAX: (09) 447 1008

Parts And Drawing Breakdown G10020N

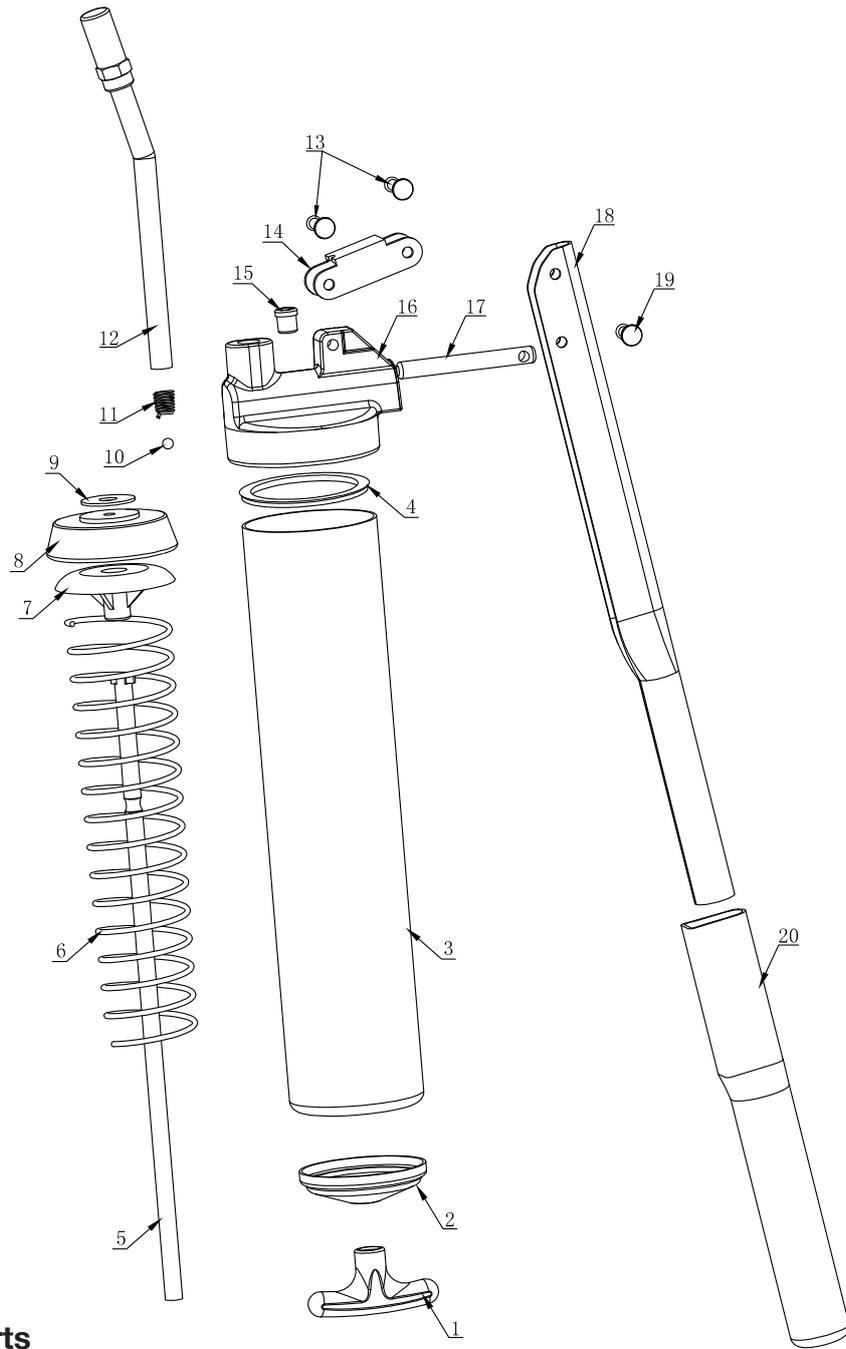

Ordering Spare Parts

Parts List – Part No. G10020N

Item	Description	Qty	Item	Description	Qty
G10020N-1	Follower rod handle	1	G10020N-11	Cone spring	1
G10020N-2	Bottom cap	1	G10020N-12	Metallic bend spout	1
G10020N-3	Tube	1	G10020N-13	Rivet	1
G10020N-4	Rubber ring	1	G10020N-14	Joint	1
G10020N-5	Follower rod	1	G10020N-15	Hexagon socket head cap screw	1
G10020N-6	Spring	1	G10020N-16	Aluminium head	1
G10020N-7	A gasket	1	G10020N-17	Piston	1
G10020N-8	Single plunger	1	G10020N-18	Handle	1
G10020N-9	B gasket	1	G10020N-19	Rivet	1
G10020N-10	Steel ball	1	G10020N-20	Handle grip	1

NSW
TEL: (02) 9939 0711
FAX: (02) 9939 0411

QLD/PNG
TEL: (07) 3204 9166
FAX: (07) 3204 1224

VIC/TAS
TEL: (03) 8787 8288
FAX: (03) 8787 8266

WA
TEL: (08) 9209 3066
FAX: (08) 9209 3933

SA/NT
TEL: (08) 8241 7111
FAX: (08) 8241 7011

NZ
TEL: (09) 447 1007
FAX: (09) 447 1008