

Description

Model 601A is a manually operated Rotary Action Drum Pump designed specifically for the transfer of chemicals and solvents from 60 litre or 205 litre drums. The pump is made from ryton/stainless components giving it exceptional chemical resistance. It is lightweight at only 3kgs. There are no aluminium parts which makes this pump ideal for use in underground mines. The 601A can transfer liquids at a rate of 20 litres per minute.

Specifications

Suitable For	Acids, alkalis, water based chemicals, petroleum products, solvents, etc from 60 or 205L drums
Delivery Rates	0.33 litres per revolution/20 litres per minute
Materials	Ryton/Stainless Steel
Bung Adaptor	2" BSP standard bung adaptor. Also available 925-006 Trisure Buttress thread or 925-007 Mouser thread
Weight	3.0kgs

Assembly Instructions

1. Suction Tube and Strainer Assembly

Use teflon tape on each piece of the 3 part suction tube for best performance. Slide bung adaptor (part No.17) over the top section of the suction tube. Screw the suction tube assembly into the bottom of the pump body (part No 1). Make sure to use teflon tape or other joint compound.

Note: All connections must be air-tight for the pump to create suction & operate correctly.

2. Crank Arm & Handle Assembly

- Remove 1 metal nut (A), from threaded shaft of handle.
- Finger-tighten remaining nut (B) against plastic handle.
- Insert nut removed in step 'a' into crank arm.
- Thread metal shaft of pump handle into crank arm until shaft is flush with nut A in crank arm.
- Loosen nut B from plastic handle, tighten against crank arm.

Note: Plastic handle should spin freely on threaded metal shaft.

3. Pump Handle Assembly

Attach the pump handle to rotor shaft. Align the set-screw with the indentation on rotor shaft and tighten. Make sure that the set screw seats properly in the indentation.

4. Spout Assembly

Insert male end of discharge spout into threaded female end & tighten. Spout can be rotated 360 degrees. Apply tape to 3/4" male thread on discharge spout. Screw into 3/4" fem opening on body. Hand tighten.

5. Lubrication

NOTE: Pumping chemicals or fuels may dry out internals of pump reducing the ability of the pump to suck and prime. To remedy this, add a couple of drops to the pump body via the outlet and turn the handle a few times to lubricate the vanes. Failure to do this may lead to priming problems or broken handles as the vane jams. Rinse thoroughly after each use with a suitable light-cleaning agent for the material being pumped.




Operating Instructions

NOTE: Before pumping, always consult the parts list included to verify that each component is compatible with the chemical being pumped. A chemical compatibility list is available from your pump dealer or Alemlube.

- Turn the handle 5 or 6 times. When liquid begins to flow down, fix the indicated point to that of the handle.
- When it stops flowing, move the handle slightly.
- After use, fix the handle to the indicated point. Then the liquid inside the pump can flow back into the drum.

Parts And Drawing Breakdown For The 601A

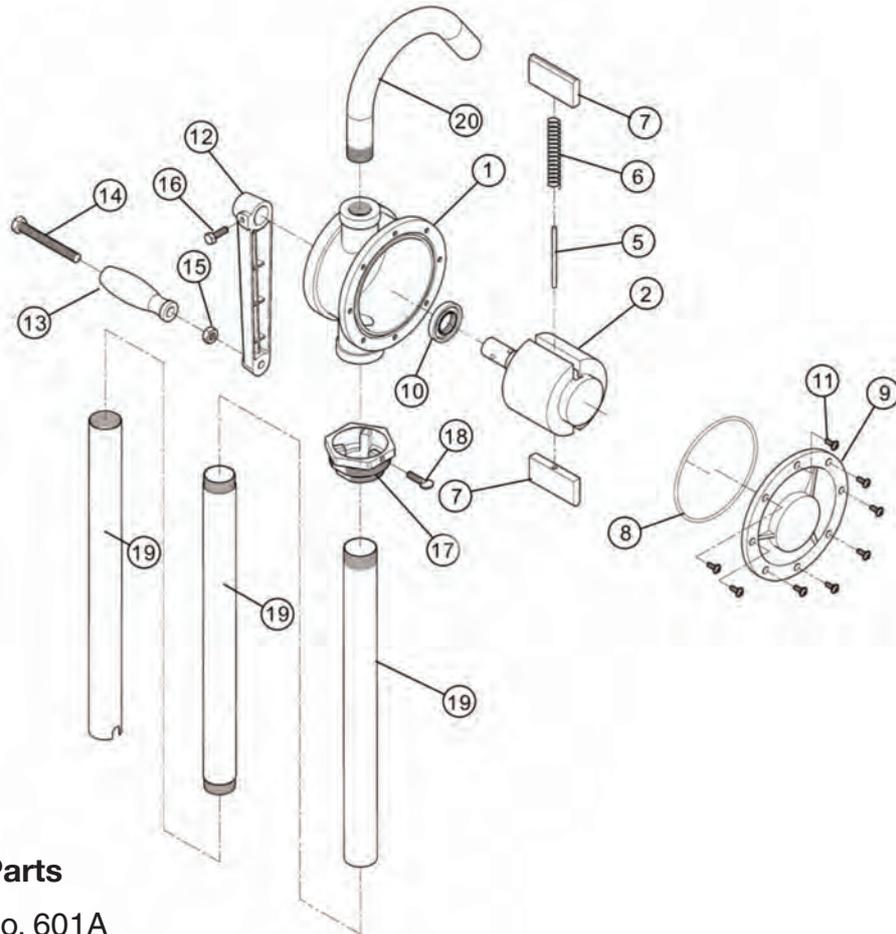

Ordering Spare Parts

Parts List – Part No. 601A

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1	601-1	Body cylinder	1	12	601-12	Crank arm	1
2	601-2	Rotor	1	13	601-13	Handle	1
5	601-5	Vane pin	1	14	601-14	Handle bolt	1
6	601-6	Vane spring	1	15	601-15	Nut	1
7	601-7	Vane	2	16	601-16	Hexagon bolt	1
8	601-8	O Ring	1	17	601-17	Bung adapter	1
9	601-9	Side cover	1	18	601-18	Bung adaptor thumb screw	1
10	601-10	Seal	1	19	601-19	Suction tube	3
11	601-11	Side cover screws	8	20	601-20	Outlet spout	1

Trouble Shooting

Problem	Remedy
Important Information for increasing the life of your 601A pump	Please note that while the ryton and stainless steel components of the 601A pump offer excellent chemical resistance to corrosive chemicals and solvents, certain products will “dry out” the internals of the pump causing parts “to stick” and the priming action of the pump reduced. To Stop this from happening, and to increase the working life of your pump, we strongly recommend that at the end of each day you lubricate the vanes of the pump by adding a few drops of oil to the internals of the pump via the outlet opening. By lubricating the vanes and then rotating the handle around two or three times at the end of each day or at the end of a production run, you will ensure that the internals of the pump are well lubricated. This practice will also ensure that next time you go to use the pump the handle will rotate smoothly and easily through its 360° rotation and the pump will prime instantly.
Pump does not pump	Check suction tubes to make sure they are airtight.
Handle is stiff to turn	1. Lubricate with drops of oil. Rinse pump with water or other suitable solvent for chemical being pumped. 2. Open pump body and clean internal parts so they rotate freely. 3. If rotor or vanes are swollen from chemical permeation, they may need to be replaced.

NSW TEL: (02) 9939 0711 FAX: (02) 9939 0411	QLD/PNG TEL: (07) 3889 8480 FAX: (07) 3889 8490	VIC/TAS TEL: (03) 8787 8288 FAX: (03) 8787 8266	WA TEL: (08) 9209 3066 FAX: (08) 9209 3933	SA/NT TEL: (08) 8241 7111 FAX: (08) 8241 7011	NZ TEL: (09) 447 1007 FAX: (09) 447 1008
---	---	---	--	---	--